

Crea texturas en cada proyecto como líneas y pinzas en 3D.



The image shows the retail packaging for the Singer Fringe Foot. The package is primarily red with a clear plastic window at the bottom showing the foot and a sample of orange fringe. The top of the package is clear plastic with a hanging tab. The Singer logo is in the top left, and a 'NEW' badge is in the top right. The text 'Fringe Foot' is centered below the logo. Below this are two circular icons: one with a 'U' for 'Utility' and one with a heart for 'Decorative & Gifting'. The bottom text reads 'Create 3D flowers and fringes easily'.



DESCRIPCIÓN DEL PRODUCTO

Marca texturas superficiales como flecos, flores y dobladillos de imitación (Calados) con una simple puntada en Zig-zag gracias a la guía elevada en el prensatelas.

Categoría: Máquina de coser doméstica

Compatibilidad: MB | CA | CC | EB

[Descargar PDF Compatibilidades](#)

INFORMACIÓN ADICIONAL

Peso 1 kg

TAMBIÉN TE PUEDE INTERESAR...



Máquina de Coser
Singer Elite ME457



Maniquí Ajustable
DF151ML_GR



ACEITE SINGER 100
ML